



**THE DATASHEET OF
EPM7064BTC100-5N**





General Description

Altera offers a variety of hardware to program and configure Altera® devices. For conventional device programming, in-system programming, and in-circuit reconfiguration, designers can choose from the hardware options shown in Table 1. These options are described in more detail in subsequent sections.

| | External Programming Hardware (1) | MasterBlaster Communications Cable | ByteBlasterMV Parallel Download Cable |
|---------------------------------|------------------------------------------|-------------------------------------------|----------------------------------------------|
| Conventional device programming | ✓ | | |
| In-system programming | | ✓ | ✓ |
| In-circuit reconfiguration | | ✓ | ✓ |

Note:

(1) External programming hardware includes the USB- and RS-232-based Altera Programming Unit (APU) or the ISA bus-based Master Programming Unit (MPU).

External Programming Hardware

Altera provides the following external programming hardware:

- Altera Programming Unit
- Altera Stand-Alone Programmer
- Logic Programmer Card
- Master Programming Unit
- Programming adapters

Altera Programming Unit

The APU is a hardware module that is used together with an appropriate adapter to program Altera devices. The APU connects to a PC via the Universal Serial Bus (USB) port and receives power from a standard wall power adapter. Programming and functional test information is transmitted from the PC through the USB port connection to the APU. A programming status light on the APU lights up when the unit is active.

When used with the appropriate adapter, the APU automatically tests for continuity between the device leads and the programming socket before programming. It can also apply test vectors to functionally test and verify programmed Altera devices. Test vectors can be created in waveform or text format in the MAX+PLUS[®] II Waveform Editor or Text Editor and applied to the device; results can be viewed in waveform or text format. The APU will also be supported by the Quartus[™] II development software in the second half of 2001.

Ordering Code: PL-APU

Altera Stand-Alone Programmer

The Altera Stand-Alone Programmer (PL-ASAP2), together with the appropriate programming adapters, provides the hardware and software needed for programming EPROM- and EEPROM-based devices and configuring SRAM-based devices. PL-ASAP2 includes an LP6 Logic Programmer Card and MPU, the MAX+PLUS II Programmer software (which requires Microsoft Windows 98, Windows NT, or Windows 2000), and complete documentation. The MAX+PLUS II Programmer software supports device programming for MAX[®] 9000, MAX 7000, MAX 3000A, Classic[™], and configuration devices.

Ordering Code: PL-ASAP2

Logic Programmer Card

The LP6 Logic Programmer card generates programming waveforms and voltages for the MPU. The software-controlled card can be installed into any full-length computer expansion slot in an IBM PC or compatible computer. The LP6 card is available as part of PL-ASAP2 or individually.

Ordering Code: PLP6

Master Programming Unit

The MPU is a hardware module that is used together with an appropriate adapter to program Altera devices. The MPU connects to a Logic Programmer card via a 25-pin ribbon cable. The MPU receives power from the Logic Programmer card and does not require an external power supply. Programming and functional test information is transmitted from the Logic Programmer card via the 25-pin ribbon cable to the MPU. A programming status light on the MPU lights up when the unit is active.

When used with the appropriate adapter, the MPU automatically tests for continuity between the device leads and the programming socket before programming. It can also apply test vectors to functionally test and verify programmed Altera devices. Test vectors can be created in waveform or text format in the MAX+PLUS II Waveform Editor or Text Editor and applied to the device; results can be viewed in waveform or text format. The MPU is available as part of the PL-ASAP2 or individually.

Ordering Code: PL-MPU

Programming Adapters

Altera provides three types of programming adapters for Altera devices: PLM-prefix adapters, PLE-prefix adapters, and the PLAD3-12 compatibility adapter. Each adapter contains one of the following sockets: a zero-insertion-force (ZIF) dual in-line package (DIP), plastic or ceramic J-lead (PLCC/JLCC), pin-grid array (PGA), small-outline integrated circuit (SOIC), or quad flat pack (QFP). Most adapters for QFP devices with 100 or more pins support Altera’s QFP carriers. Adapters with an “NC” suffix program QFP devices that are not in a QFP carrier.



For more information, see the *QFP Carrier & Development Socket Data Sheet*.

Table 2 lists the adapters required for each Altera device and package option. These adapters are supported by both the PL-APU and PL-ASAP2 programmers.

| Table 2. Programming Adapters & Hardware Support (Part 1 of 4) <i>Note (1)</i> | | | |
|-------------------------------------------------------------------------------------------|---------------------------------|----------------|--------------------------------------------------|
| Device | Package | Adapter | MasterBlaster & ByteBlasterMV Support |
| APEX™ II | All packages | (2) | ✓ |
| APEX 20K | All packages | (2) | ✓ |
| Mercury™ | All packages | (2) | ✓ |
| ARM-based Excalibur™ | All packages | (2) | ✓ |
| MIPS-based Excalibur | All packages | (2) | ✓ |
| ACEX™ 1K | All packages | (2) | ✓ |
| FLEX® 10K | All packages | (2) | ✓ |
| FLEX 8000 | All packages | (2) | ✓ |
| FLEX 6000 | All packages | (2) | ✓ |
| EPC16 | Ultra FineLine BGA™ (88-pin) | (3) | ✓ |

| Table 2. Programming Adapters & Hardware Support (Part 2 of 4) <i>Note (1)</i> | | | |
|-------------------------------------------------------------------------------------------|-----------------|----------------|--------------------------------------------------|
| Device | Package | Adapter | MasterBlaster & ByteBlasterMV Support |
| EPC2 | J-lead (20-pin) | PLMJ1213 | ✓ |
| | TQFP (32-pin) | PLMT1064 | ✓ |
| EPC1 | DIP (8-pin) | PLMJ1213 | – |
| | J-lead (20-pin) | PLMJ1213 | – |
| EPC1441 | DIP (8-pin) | PLMJ1213 | – |
| | J-lead (20-pin) | PLMJ1213 | – |
| | TQFP (32-pin) | PLMT1064 | – |
| EPC1213 | DIP (8-pin) | PLMJ1213 | – |
| | J-lead (20-pin) | PLMJ1213 | – |
| EPC1064 EPC1064V | DIP (8-pin) | PLMJ1213 | – |
| | J-lead (20-pin) | PLMJ1213 | – |
| | TQFP (32-pin) | PLMT1064 | – |
| EPM9320 EPM9320A | J-lead (84-pin) | PLMJ9320-84 | ✓ |
| | RQFP (208-pin) | PLMR9000-208NC | ✓ |
| | RQFP (240-pin) | PLMR9000-208 | ✓ |
| | | PLMR9000-240NC | ✓ |
| PLMR9000-240 | ✓ | | |
| EPM9400 EPM9400A | J-lead (84-pin) | PLMJ9400-84 | ✓ |
| | RQFP (208-pin) | PLMR9000-208NC | ✓ |
| | RQFP (240-pin) | PLMR9000-208 | ✓ |
| | | PLMR9000-240NC | ✓ |
| PLMR9000-240 | ✓ | | |
| EPM9480 EPM9480A | RQFP (208-pin) | PLMR9000-208NC | ✓ |
| | RQFP (240-pin) | PLMR9000-208 | ✓ |
| | | PLMR9000-240NC | ✓ |
| PLMR9000-240 | ✓ | | |
| EPM9560 EPM9560A | RQFP (208-pin) | PLMR9000-208NC | ✓ |
| | RQFP (208-pin) | PLMR9000-208 | ✓ |
| | | PLMR9000-240NC | ✓ |
| | PLMR9000-240 | ✓ | |
| | PGA (280-pin) | PLMG9000-280 | ✓ |
| RQFP (304-pin) | PLMR9000-304 | ✓ | |
| BGA (256-pin) | (3) | ✓ | |

| Table 2. Programming Adapters & Hardware Support (Part 3 of 4) <i>Note (1)</i> | | | |
|-------------------------------------------------------------------------------------------|------------------------------|---------------------|--------------------------------------------------|
| Device | Package | Adapter | MasterBlaster & ByteBlasterMV Support |
| EPM7032 | J-lead (44-pin) | PLMJ7000-44 | ✓ |
| EPM7032V | PQFP (44-pin) | PLMQ7000-44 | ✓ |
| EPM7032S | TQFP (44-pin) | PLMT7000-44 | ✓ |
| EPM7032AE | | | ✓ |
| EPM7032B | | | ✓ |
| EPM7064 | J-lead (44-pin) | PLMJ7000-44 | ✓ |
| EPM7064S | TQFP (44-pin) | PLMT7000-44 | ✓ |
| EPM7064AE | J-lead (68-pin) | PLMJ7000-68 | ✓ |
| EPM7064B | J-lead (84-pin) | PLMJ7000-84 | ✓ |
| | Ultra FineLine BGA (49-pin) | (3) | ✓ |
| | PQFP (100-pin) | PLMQ7000-100NC | ✓ |
| | | PLMQ7000-100 | ✓ |
| | TQFP (100-pin) | PLMT7000-100NC | ✓ |
| | FineLine BGA (100-pin) | (3) | ✓ |
| EPM7096 | J-lead (68-pin) | PLMJ7000-68 | – |
| | J-lead (84-pin) | PLMJ7000-84 | – |
| | PQFP (100-pin) | PLMQ7000-100 | – |
| EPM7128E | J-lead (84-pin) | PLMJ7000-84 | ✓ |
| EPM7128S | PQFP (100-pin) | PLMQ7000-100NC | ✓ |
| EPM7128A | | PLMQ7000-100 | ✓ |
| EPM7128AE | PQFP (160-pin) | PLMQ7128/7160-160NC | ✓ |
| EPM7128B | | PLMQ7128/7160-160 | ✓ |
| | TQFP (144-pin) | (3) | ✓ |
| | Ultra FineLine BGA (49-pin) | (3) | ✓ |
| | FineLine BGA (100-pin) | PLMF7000-100 | ✓ |
| | Ultra FineLine BGA (169-pin) | (3) | ✓ |
| | FineLine BGA (256-pin) | PLMF7000-256 | ✓ |
| EPM7160E | J-lead (84-pin) | PLMJ7000-84 | ✓ |
| EPM7160S | TQFP (100-pin) | PLMT7000-100NC | ✓ |
| | PQFP (100-pin) | PLMQ7000-100 | ✓ |
| | PQFP (160-pin) | PLMQ7128/7160-160NC | ✓ |
| | | PLMQ7128/7160-160 | ✓ |
| EPM7192E | PGA (160-pin) | PLMG7192-160 | ✓ |
| EPM7192S | PQFP (160-pin) | PLMQ7192/7256-160NC | ✓ |
| | | PLMQ7192/7256-160 | ✓ |

| Table 2. Programming Adapters & Hardware Support (Part 4 of 4) <i>Note (1)</i> | | | |
|-------------------------------------------------------------------------------------------|------------------------------|---------------------|--------------------------------------------------|
| Device | Package | Adapter | MasterBlaster & ByteBlasterMV Support |
| EPM7256E | TQFP (100-pin) | PLMT7000-100NC | ✓ |
| EPM7256S | TQFP (144-pin) | PLMT7000-144NC | ✓ |
| EPM7256AE | PGA (192-pin) | PLMG7000-192 | ✓ |
| EPM7256B | PQFP (160-pin) | PLMQ7192/7256-160NC | ✓ |
| | | PLMQ7192/7256-160 | ✓ |
| | RQFP (208-pin) | PLMR7256-208 | ✓ |
| | PQFP (208-pin) | PLMR7256-208NC | ✓ |
| | Ultra FineLine BGA (169-pin) | (3) | ✓ |
| | FineLine BGA (256-pin) | PLMF7000-256 | ✓ |
| EPM7512AE | TQFP (144-pin) | (3) | ✓ |
| EPM7512B | PQFP (208-pin) | (3) | ✓ |
| | BGA (256-pin) | (3) | ✓ |
| | FineLine BGA (256-pin) | (3) | ✓ |
| | Ultra FineLine BGA (169-pin) | (3) | ✓ |
| EPM3032A | J-lead (44-pin) | PLMJ3000A-44 | ✓ |
| | TQFP (44-pin) | PLMT3000A-44 | ✓ |
| EPM3064A | J-lead (44-pin) | PLMJ3000A-44 | ✓ |
| | TQFP (44-pin) | PLMT3000A-44 | ✓ |
| | TQFP (100-pin) | PLMT3000A-100NC | ✓ |
| EPM3128A | TQFP (100-pin) | PLMT3000A-100NC | ✓ |
| | TQFP (144-pin) | PLMT3000A-144NC | ✓ |
| EPM3256A | TQFP (100-pin) | PLMT3000A-100NC | ✓ |
| | PQFP (208-pin) | PLMQ3000A-208NC | ✓ |
| EP600 | DIP (24-pin) | PLED610 | – |
| EP610 | J-lead (28-pin) | PLEJ610 | – |
| | SOIC (24-pin) | PLES610 | – |
| EP900 | DIP (40-pin) | PLED910 | – |
| EP910 | J-lead (44-pin) | PLEJ910 | – |
| EP1810 | J-lead (68-pin) | PLMJ1810 | – |
| | PGA (68-pin) | PLEG1810 | – |

Notes:

- (1) Adapters with an NC suffix program QFP devices that are not in QFP carriers.
- (2) Configuration of Excalibur, Mercury, APEX II, APEX 20K, ACEX 1K, FLEX 10K, FLEX 8000, or FLEX 6000 devices is supported by configuration devices (EPC1064, EPC1064V, EPC1213, EPC1, EPC1441, EPC2, and EPC16), and the MasterBlaster™ or ByteBlasterMV™ download cable.
- (3) A MasterBlaster or ByteBlasterMV download cable is used to program this device via in-system programming. For the latest adapter support for this package, go to the Altera web site (<http://www.altera.com>) or contact a local Altera sales office.

PLM-Prefix Adapters

The PLM-prefix adapters plug directly into the APU or MPU. Each adapter provides programming support for a specific device package. Additionally, PLM-prefix adapters (except the PLMJ1213 and PLMT1064) support functional testing of programmed Altera devices. The PLMJ1213 and PLMT1064 adapters can program the configuration devices used to configure Excalibur, Mercury, APEX II, APEX 20K, ACEX 1K, FLEX 10K, FLEX 8000, and FLEX 6000 devices.

PLE-Prefix Adapters

The PLE-prefix adapters plug into the PLAD3-12 compatibility adapter, which in turn plugs into the APU or MPU. Each PLE-prefix adapter provides programming support for a specific Classic device.

PLAD3-12 Compatibility Adapter

The PLAD3-12 compatibility adapter plugs directly into the APU or MPU. This compatibility adapter allows PLE-prefix adapters to be used with the APU. See Table 2 on page 3.

Ordering Codes: *PLExxxx, PLMxxxx, PLAD3-12*

MasterBlaster Download Cable

The MasterBlaster download cable is a hardware interface to either a standard PC or UNIX workstation RS-232 port (known as a “COM port” on a PC and a “ttya port” on a UNIX workstation) or a USB port. It provides configuration data to Excalibur, Mercury, APEX II, APEX 20K, ACEX 1K, FLEX 10K, FLEX 8000, and FLEX 6000 devices and programming data to MAX 9000, MAX 7000S, MAX 3000A, MAX 7000B, and MAX 7000A devices.

The 25-pin female port on the MasterBlaster download cable connects to an RS-232 port with a standard serial cable, or the MasterBlaster can connect to a USB port. The 10-pin female plug on the MasterBlaster download cable connects to a device on a circuit board via a 10-pin male header. The MasterBlaster cable contains status lights that indicate the state of the device configuration or programming. The MasterBlaster supports the SignalTap® feature, which allows designers to view internal device logic nodes with a virtual logic analyzer.

Ordering Code: *PL-MASTERBLASTER*



For more information, refer to the *MasterBlaster Serial Download Cable Data Sheet*.

ByteBlasterMV Parallel Download Cable

The ByteBlasterMV parallel download cable is a hardware interface to a standard parallel port (also known as an LPT port). This cable channels configuration data to Excalibur, Mercury, APEX II, APEX 20K, ACEX 1K, FLEX 10K, FLEX 8000, and FLEX 6000 devices and programming data to MAX 9000, MAX 7000S, MAX 7000B, MAX 7000A, and MAX 3000A devices.

The ByteBlasterMV download cable has a 25-pin male header that connects to the PC parallel port, and a 10-pin female plug that connects to the circuit board. Data is downloaded from the PC's parallel port through the ByteBlasterMV cable to the circuit board.

To configure/program low-voltage devices (e.g., APEX 20K and MAX 7000B devices) using a ByteBlasterMV download cable, connect the cable's VCC pin to a 3.3-V power supply and the device to the appropriate power supply. Altera 1.8-V and 2.5-V devices have 3.3-V tolerant inputs, so the download cable's 3.3-V output will not harm these devices. The pull-up resistors should be connected to the 3.3-V power supply.

Ordering Code: *PL-BYTEBLASTERMV*



For more information, see the *ByteBlasterMV Parallel Download Cable Data Sheet*.

Programming Techniques

Table 3 summarizes Altera device programming/configuration techniques.

| <i>Table 3. Programming/Configuration Techniques by Device Family (Part 1 of 2)</i> | |
|----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device Family | Programming/Configuration Techniques |
| Excalibur Mercury APEX II APEX 20K ACEX 1K FLEX 10K | Download configuration data via the MasterBlaster or ByteBlasterMV download cable, or an embedded microprocessor using the JTAG ports |
| Excalibur Mercury APEX II APEX 20K ACEX 1K FLEX 10K FLEX 8000 FLEX 6000 | In passive serial (PS) mode, download configuration data via the MasterBlaster or ByteBlasterMV download cable Configure devices via an on-board microcontroller |

| Table 3. Programming/Configuration Techniques by Device Family (Part 2 of 2) | |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| Device Family | Programming/Configuration Techniques |
| Excalibur Mercury APEX II APEX 20K ACEX 1K FLEX 10K FLEX 6000 | Configure via an EPC2, EPC1, or EPC1441 configuration device |
| FLEX 8000 | Configure via an EPC1, EPC1441, EPC1213, EPC1064, or EPC1064V configuration device |
| MAX 9000 | Program devices in-system via the MasterBlaster or ByteBlasterMV download cable and the JTAG ports |
| MAX 7000A | Program via the MPU and the appropriate adapters |
| MAX 7000B | Program via third-party programming hardware |
| MAX 7000S | Program in-system via in-circuit test (ICT) equipment or an on-board microcontroller |
| MAX 3000A | Program in-system via in-circuit test (ICT) equipment or an on-board microcontroller |
| MAX 7000 | Program using the MPU and the appropriate adapters |
| Classic | Program using third-party programming hardware |

Revision History

The information contained in the *Altera Programming Hardware Data Sheet* version 5.1 supersedes information published in previous versions.

The following changes were made to the *Altera Programming Hardware Data Sheet* version 5.1:

- Added APEX II content
- Text addition to Note (3) on page 6



Notes:



Notes:



101 Innovation Drive
San Jose, CA 95134
(408) 544-7000
<http://www.altera.com>
Applications Hotline:
(800) 800-EPLD
Customer Marketing:
(408) 544-7104
Literature Services:
lit_req@altera.com

Altera, ACEX, APEX, APEX 20K, APEX II, ByteBlasterMV, Classic, Excalibur, FLEX, FLEX 10K, FLEX 8000, FLEX 6000, MasterBlaster, MAX, MAX 9000, MAX 9000A, MAX 7000, MAX 7000A, MAX 7000S, MAX 3000, MAX 3000A, MAX+PLUS, MAX+PLUSII, Quartus, Quartus II, SignalTap, and specific device designations are trademarks and/or service marks of Altera Corporation in the United States and other countries. Altera acknowledges the trademarks of other organizations for their respective products or services mentioned in this document. Altera products are protected under numerous U.S. and foreign patents and pending applications, maskwork rights, and copyrights. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera Corporation. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.



Copyright © 2001 Altera Corporation. All rights reserved.

I.S. EN ISO 9001

Looking for pricing, stock, or lifecycle information?

Click below to explore more details on WIN SOURCE:

 [View EPM7064BTC100-5N on WIN SOURCE](#)

 [Intel Information](#)

Optimize Your Supply Chain with WIN SOURCE Solutions

-  Global Sourcing Solution
-  Obsolete Management
-  Cost Control Management
-  Shortage Management
-  Alternative Solution
-  Excess Inventory Management