



**THE DATASHEET OF
ACSPGY200000**

 
 


pi-topSPEAKER

Preparing for pi-top

Warning: Ensure the pi-topSPEAKER is loosely screwed down to the Modular Rail before it is fully inserted into the Hub PCB.


Failure to do this could cause misalignment to the pins which could result in damage to the speaker module.

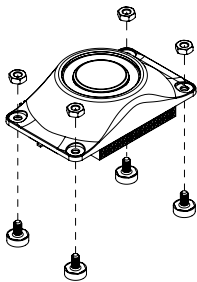

Preparing for pi-topCEED

Warning: Ensure the pi-topSPEAKER is placed on the Mag Rails before it is fully inserted into the Hub PCB.

 Failure to do this could cause misalignment to the pins which could result in damage to the speaker module.

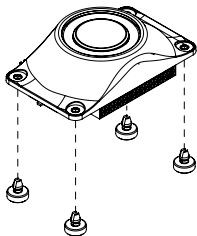



To install pi-topSPEAKER software enter the following command into your Terminal then reboot.

```
sudo apt-get update  
sudo apt-get install -y pt-speaker
```

Looking for pricing, stor

Click below to explore more detail

-  View [ACSPGY200000](#) on W
-  [Pi-Top](#) Information

Optimize Your Supply C

-  Global Sourcing Solution
-  Obsolete Management
-  Cost Control Management
-  Shortage Management
-  Alternative Solution
-  Excess Inventory Manageme