



THE DATASHEET OF SMS-A-D15




Snap-In Cable Tie Mounts

INSTRUCTIONS SMS MOUNTS


ties; those secured by screws only and those back or screws. For the screw-only type, place back to surface using two #6 round head screws in desired location and secure to surface using two #6 round head screws driven through the pre-existing holes. When using the adhesive variety, make sure the designated surface is flat, smooth, dry, and cleaned free of grease, oil, and other contaminants (use isopropyl alcohol). For best results, install at 70°F (21°C) or above.

Backed Instruction

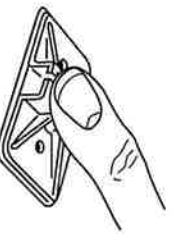

(Fig. 2)

Then press firmly on the center of the mount (Fig. 2), and

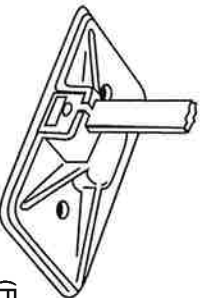

(Fig. 4)

of mount. Holding tail up, rotate the 90° as shown in Fig. 4.

Wrap *PAN-Ty* Cable Tie around bundle and insert tip through both the mount opening and cable tie head (Fig. 5). Pull cable tie tight to insure a neat, secure installation.



NOTE: Locking *PAN-Ty* Cable Ties (PLT) can be easily installed with *PANDUIT* tension-controlled tools. Releasable *PAN-Ty* Cable Ties (PRT) are hand installed, releasable, and reusable.



E-mail: cs@panduit.com
Fax: (770)781-9076
www.panduit.com



Snap-In Cable Tie Mounts

INSTALLATION INSTRUCTIONS SMS MOUNTS

© PANDUIT Corp. 2006


Mounts are available in two varieties; those secured by screws only and those secured with either an adhesive back or screws. For the screw-only type, place mount in desired location and secure to surface using two #6 round head screws driven through the pre-existing holes. When using the adhesive variety, make sure the designated surface is flat, smooth, dry, and cleaned free of grease, oil, and other contaminants (use isopropyl alcohol). For best results, install at 70°F (21°C) or above.

Adhesive Backed Instruction




(Fig. 1)

Remove paper liner from back of mount. Place in desired location and press mount firmly at each end (Fig. 1).

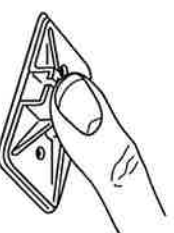


(Fig. 2)

Then press firmly on the center of the mount (Fig. 2), and

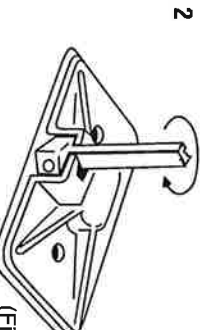


(Fig. 3)

Insert head of cable tie into slot of mount. Holding tail up, rotate the 90° as shown in Fig. 3 until properly in place as shown in Fig. 4.

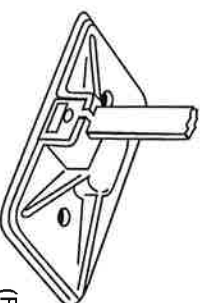

(Fig. 4)

Wrap *PAN-Ty* Cable Tie around bundle and insert tip through both the mount opening and cable tie head (Fig. 5). Pull cable tie tight to insure a neat, secure installation.

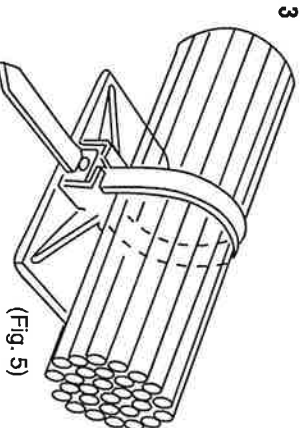

(Fig. 5)

NOTE: Locking *PAN-Ty* Cable Ties (PLT) can be easily installed with *PANDUIT* tension-controlled tools. Releasable *PAN-Ty* Cable Ties (PRT) are hand installed, releasable, and reusable.

For Instructions in Local Languages and Technical Support: http://www.panduit.com/resources/install_maintain.asp



E-mail: cs@panduit.com
Fax: (770)781-9076
www.panduit.com

Looking for pricing, stock, or lifecycle information?

Click below to explore more details on WIN SOURCE:

 [View SMS-A-D15 on WIN SOURCE](#)

 [Panduit Corp](#) Information

Optimize Your Supply Chain with WIN SOURCE Solutions

-  Global Sourcing Solution
-  Obsolete Management
-  Cost Control Management
-  Shortage Management
-  Alternative Solution
-  Excess Inventory Management