



THE DATASHEET OF HMET20165




HMEBG - SERIES

BUL86262

REV. A

ASSEMBLY INSTRUCTIONS FOR HMEBG - HME GLAND PLATE BOTTOM

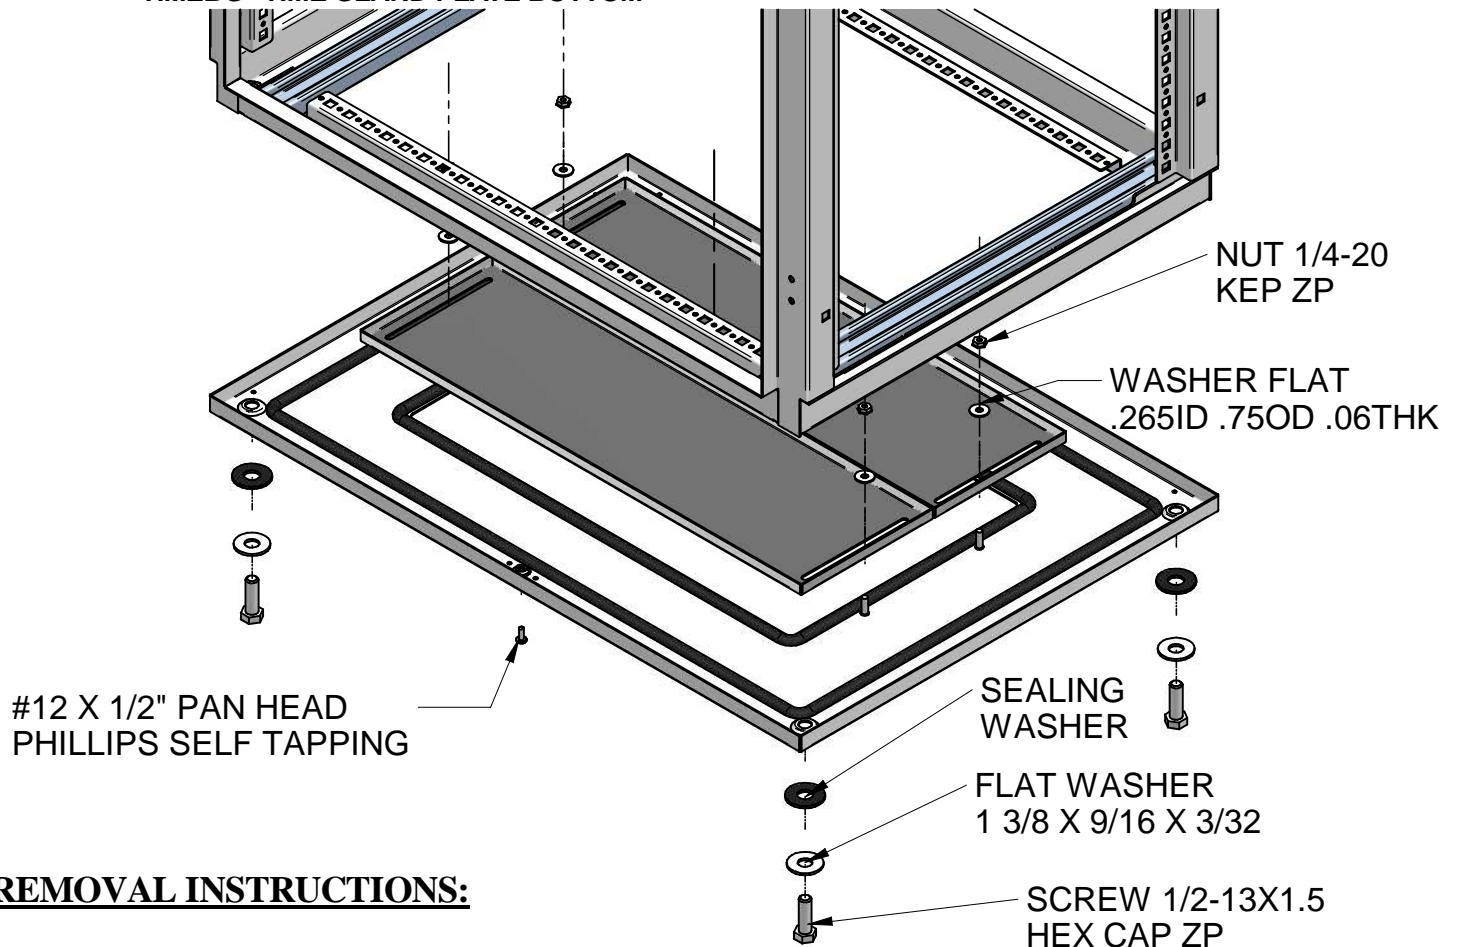

REMOVAL INSTRUCTIONS:


- A) Loosen four 1/2" bolts and remove thread rolling screws.
- B) Remove bottom panel.

INSTALLATION INSTRUCTIONS:

- A) Line holes up on bottom panel with holes on the bottom of the frame.
- B) Install 1/2" bolts with washers and tighten down, also install center thread rolling screw.

GLAND PLATE REMOVAL/ADJUSTMENT INSTRUCTIONS:

- A) Loosen 1/4-20 Nuts.
- B) Adjust or remove gland plates, tighten back down with 1/4-20 nuts and washers.

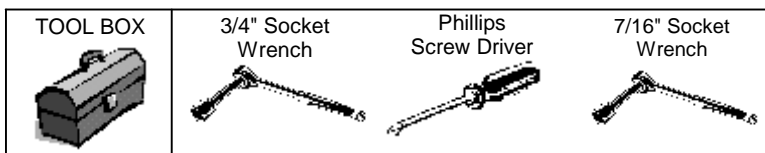

Looking for pricing, stock, or lifecycle information?

Click below to explore more details on WIN SOURCE:

- ⊖ [View HMET20165 on WIN SOURCE](#)
- ⊖ [Hammond Manufacturing Information](#)

Optimize Your Supply Chain with WIN SOURCE Solutions

- ✓ Global Sourcing Solution
- ✓ Obsolete Management
- ✓ Cost Control Management
- ✓ Shortage Management
- ✓ Alternative Solution
- ✓ Excess Inventory Management