


DRV-ACC16-EVM Accelerometer User's Guide

The DRV-ACC16-EVM is a three-axis accelerometer for use in lab acceleration or vibration testing of haptic feedback systems. The accelerometer allows vibrations to be quantified making haptic feedback evaluation, reporting, and comparisons easier.

This document contains instructions and general guidelines for using the DRV-ACC16-EVM and measuring acceleration.

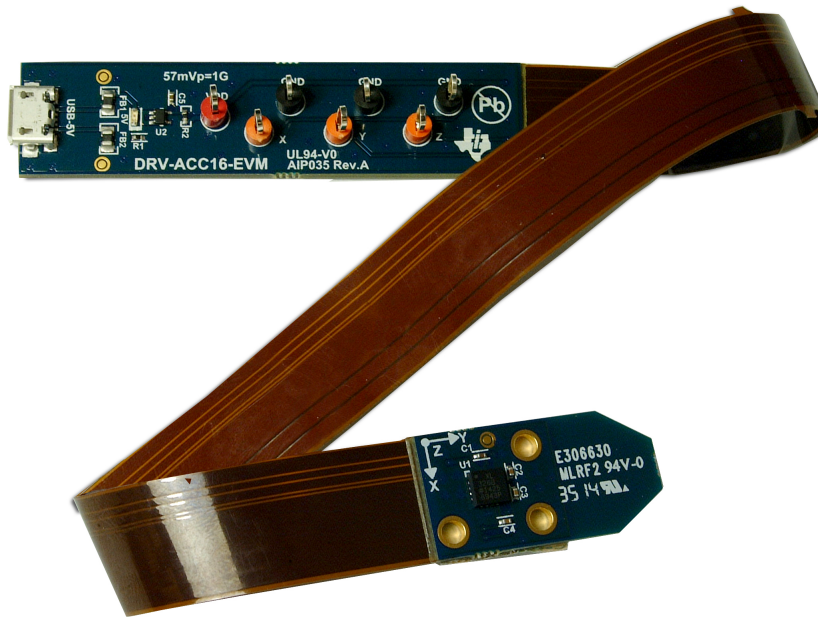

Features

- Measure X, Y, and Z acceleration simultaneously using three independent analog outputs
- Connect to oscilloscope for simple acceleration readings
- Up to 16 g_{peak} acceleration measurements
- Small size and flex cable, minimize interference with natural motion of the system

Kit Contents

- DRV-ACC16-EVM accelerometer board
- Micro-USB cable for power
- Texas Instruments Black Carrying and Storage Case

Contents

| | | |
|---|--|----|
| 1 | Overview | 3 |
| 2 | Getting Started | 4 |
| 3 | Converting Voltage to Acceleration..... | 6 |
| 4 | Determining the Axis of Vibration..... | 7 |
| 5 | Mounting Guidelines..... | 9 |
| 6 | Mounting an Actuator for Testing..... | 9 |
| 7 | Example Waveforms | 10 |
| 8 | Screw Hole Dimensions | 11 |
| 9 | Schematic, Layout, and Bill of Materials | 12 |

List of Figures

| | | |
|----|--|----|
| 1 | Board Connections | 3 |
| 2 | 3M Tape on Backside of DRV-ACC16-EVM | 4 |
| 3 | Attach Accelerometer to Vibrating Object | 4 |
| 4 | DRV-ACC16-EVM - Measurement Board | 5 |
| 5 | AC-Coupled Accelerometer | 6 |
| 6 | Accelerometer Conversion Voltage | 6 |
| 7 | Acceleration Axis..... | 7 |
| 8 | ERM Axes of Vibration | 7 |
| 9 | Y and Z Axes Acceleration Measurement | 7 |
| 10 | Z-Direction LRA | 8 |
| 11 | Z-Axis Acceleration Measurement..... | 8 |
| 12 | Piezo Module | 8 |
| 13 | X Axis Acceleration Measurement..... | 8 |
| 14 | LRA Mounting Stack Up | 9 |
| 15 | Click and Release Effect | 10 |
| 16 | Ramp Up and Pulsing Effect..... | 11 |
| 17 | Screw-Hole Footprint | 11 |
| 18 | DRV-ACC16-EVM Schematic | 12 |
| 19 | DRV-ACC16-EVM Top Overlay | 13 |
| 20 | DRV-ACC16-EVM..... | 13 |
| 21 | DRV-ACC16-EVM Top Layer..... | 13 |
| 22 | DRV-ACC16-EVM Bottom Layer | 13 |
| 23 | DRV-ACC16-EVM Bottom Solder..... | 13 |
| 24 | DRV-ACC16-EVM Drill Drawing..... | 14 |
| 25 | DRV-ACC16-EVM Board Dimensions | 14 |
| 26 | DRV-ACC16-EVM Fabrication Drawing..... | 15 |

List of Tables

| | | |
|---|---|----|
| 1 | DRV-ACC16-EVM Specifications..... | 3 |
| 2 | Board Power Requirements | 4 |
| 3 | Power Requirements When Bypassing LDO..... | 4 |
| 4 | Adhesive Transfer Tape for Mounting Actuators | 9 |
| 5 | Bill of Materials | 16 |

1 Overview

There are various types of accelerometers available with different measurement ranges, thresholds, precision, and accuracy, but in general, they all convert mechanical vibration into an electrical signal, which can then be converted to acceleration.

The DRV-ACC16-EVM can measure acceleration up to 16 g (“ g ” is the acceleration due to Earth’s gravity or 9.81 m/s^2). The EVM converts the acceleration from mechanical movement to mV at a rate of $57 \text{ mV}_{\text{peak}}$ per g_{peak} . This means that every 57 millivolts of peak voltage equals 1 g of peak acceleration and 114 mV_{peak} equals 2 g ’s of peak acceleration.

1.1 Required Equipment and Materials

- DRV-ACC16-EVM accelerometer board
- Micro-USB cable for power
- Oscilloscope for measuring voltage
- Adhesive transfer tape (see [Mounting Guidelines](#))

1.2 Quick Start Connections

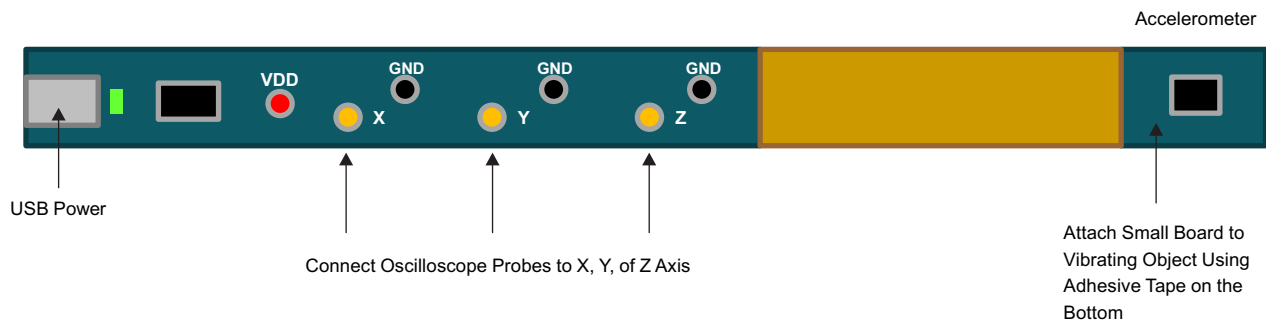


Figure 1. Board Connections

1. Attach the small accelerometer board to the vibrating object
2. Connect an oscilloscope to test points X, Y, and/or Z
3. Provide USB 5-V power

1.3 DRV-ACC16-EVM Specifications

[Table 1](#) lists the DRV-ACC16-EVM specifications.

Table 1. DRV-ACC16-EVM Specifications

| | Value | Units |
|--|-----------|---|
| Board Size (Total) | 15 x 290 | mm |
| Board Size (Accelerometer Only) | 16.6 x 15 | mm |
| Cable / Flex Length | 203 | mm |
| Interface | Analog | - |
| VDD | 3.5 – 5.5 | V |
| Acceleration Range | ± 16 | g_{peak} |
| Bandwidth (X, Y channels) | 1600 | Hz |
| Bandwidth (Z channel) | 550 | Hz |
| Noise Density | 300 | $\mu\text{g} / \sqrt{\text{Hz}}$ rms |
| Conversion Ratio | 57 | $\text{mV}_{\text{peak}} / g_{\text{peak}}$ |
| DC Offset (at 0 g) | 1.5 | V |
| Typical Temperature Dependency (-25°C to 70°C) | < 3 | mg |

1.4 Power Requirements

The accelerometer board has the following electrical specifications:

Table 2. Board Power Requirements

| | Value | Units |
|--------|---------|-------|
| USB-5V | 3.5 – 5 | V |
| IDD | 10 | mA |

The V_s , accelerometer supply voltage, determines the ratio of acceleration to voltage conversion. There is an on-board LDO that converts USB-5 V to 3 V for the accelerometer. The LDO can be bypassed, if required.

Table 3. Power Requirements When Bypassing LDO

| | Value | Units |
|----------------------------|-----------|---------------|
| V_s | 1.8 – 3.6 | V |
| IDD ($V_s = 3\text{ V}$) | 350 | μA |

2 Getting Started

The following instructions should be used for placing, mounting, and measuring acceleration with the DRV-ACC16-EVM.

1. Attach the small accelerometer board to the surface of the vibrating object. Use the 3M tape adhesive on the bottom of the board to attach it to the surface.

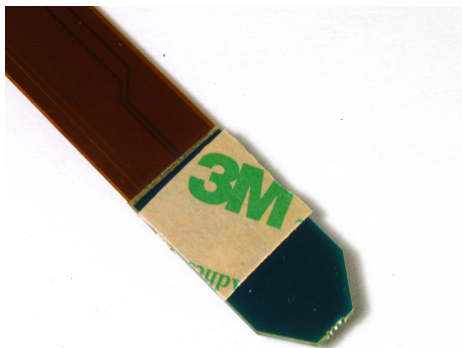


Figure 2. 3M Tape on Backside of DRV-ACC16-EVM

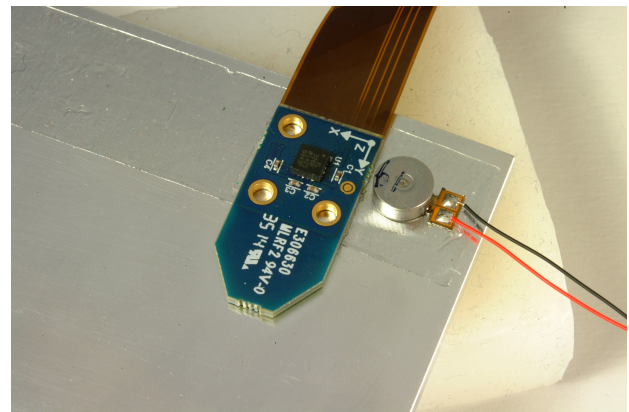


Figure 3. Attach Accelerometer to Vibrating Object

2. Place the vibrating object on a soft surface such as packing foam, bubble wrap, silicone, or gel material so that the object does not rattle or move when vibrating on the table. The surface should mimic the object's final operating environment. See [Mounting an Actuator for Testing](#) for additional information.

3. Connect an oscilloscope to the X, Y, and/or Z axis test points on the measurement board. See [Determining the Axis of Vibration](#) for additional instructions.



Figure 4. DRV-ACC16-EVM - Measurement Board

4. Apply power to the board by connecting the micro-USB cable to a USB power source such as a computer or USB charger.
5. AC couple the measurement channels on the oscilloscope and reduce the “V/div” to 50–100 mV. The “V/div” may need to be adjusted later.
6. As the object vibrates, the acceleration should appear as a sine wave on the oscilloscope.
7. Convert the voltage to units of gravity. The conversion ratio is shown in [Equation 1](#):

$$57 \text{ mV}_{\text{peak}} = 1 \text{ g}_{\text{peak}} \quad (1)$$

3 Converting Voltage to Acceleration

The output voltage of the three accelerometer channels has a DC offset of 1.5 V at 0 g. The channels of the DRV-ACC16-EVM can be AC coupled to only show changes in acceleration. This is recommended for measuring the acceleration of haptic systems.

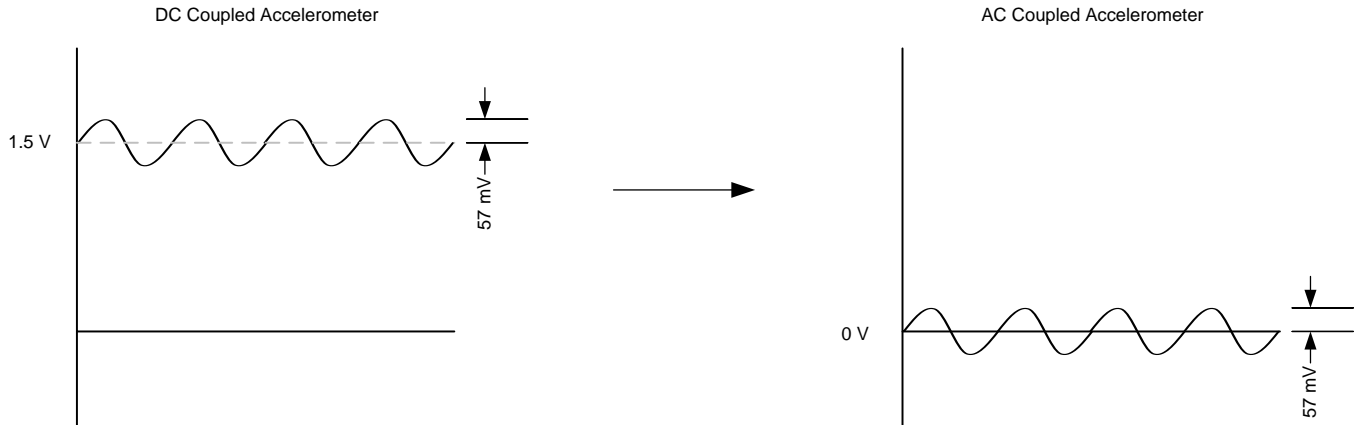


Figure 5. AC-Coupled Accelerometer

To calculate the acceleration, take the peak voltage of a single accelerometer output and divide by 57 mV. Every 57 mV of peak voltage corresponds to 1 g of peak acceleration.

$$\text{Acceleration (g)} = \frac{V_{\text{peak}}}{57 \text{ mV}} \tag{2}$$

V_{peak} – measured peak voltage on test point X, Y, or Z.

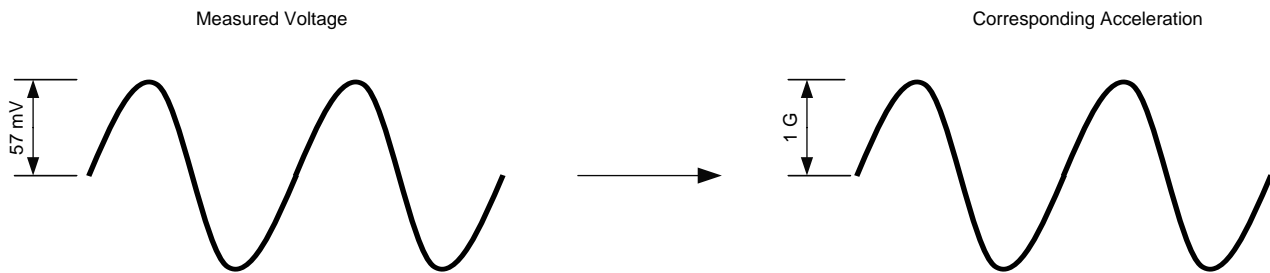


Figure 6. Accelerometer Conversion Voltage

4 Determining the Axis of Vibration

The orientation of the accelerometer can be determined by the 3-axis label on the small accelerometer board. The direction of the arrows corresponds to the axis which the acceleration is measured. The Z-direction is measured normal to, or coming out of, the board.

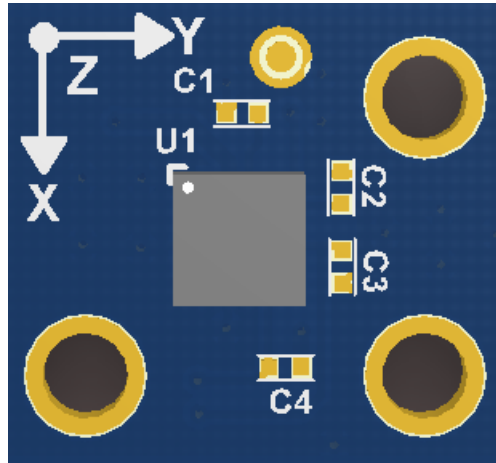


Figure 7. Acceleration Axis

For haptic applications, the axis of vibration is determined by the motion of the actuator. Take for example a DC motor that spins around the X axis and creates force in the Y and Z axes. In this case, measure vibration by connecting to the Y and Z test points of the accelerometer.

The axis of vibration can often be found in the actuator datasheet; if not, the axis is usually easily determined by measuring all axes and finding the axis with the highest acceleration. Below are example diagrams of ERM, LRA, and Piezo actuators and their axes of vibration.

NOTE: Not all actuators will have these same axes of vibration.

4.1 Eccentric Rotating Mass

The ERM motor in [Figure 8](#) spins around the X axis and produces rotational vibration in the YZ plane. Acceleration can be observed on the Y and Z accelerometer channels.




Figure 8. ERM Axes of Vibration

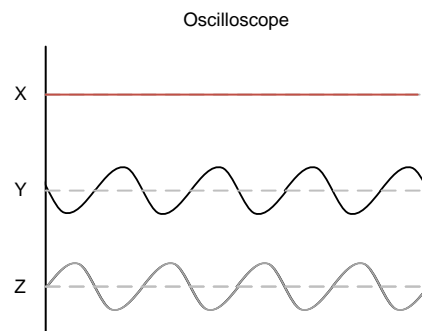


Figure 9. Y and Z Axes Acceleration Measurement

4.2 Linear Resonant Actuator

The following LRA motor (Figure 10) moves along the Z axis and produces vibration only on the Z axis. Acceleration can be observed on the Z accelerometer channel.

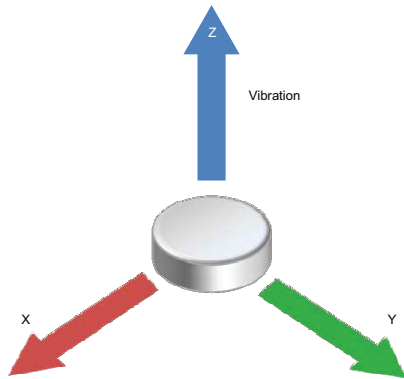


Figure 10. Z-Direction LRA

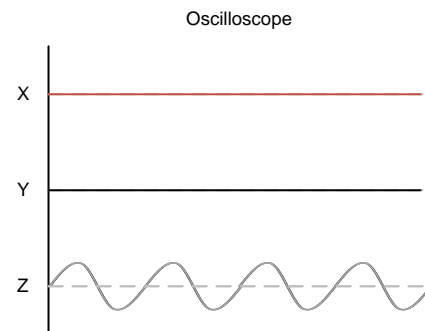


Figure 11. Z-Axis Acceleration Measurement

4.3 Piezo

Figure 12 illustrates a piezo module. A Piezo module is made using a thin piece of piezo (a piezo bender), a mass, and a mechanical housing. The piezo bender and mass will move side-to-side when a high-voltage sine wave is applied to the module's input terminals.

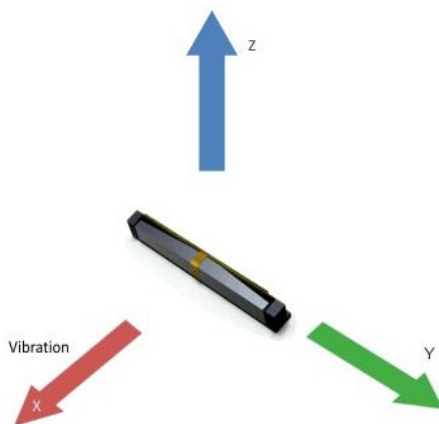


Figure 12. Piezo Module

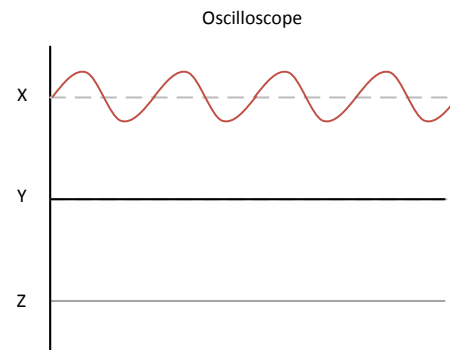


Figure 13. X Axis Acceleration Measurement

5 Mounting Guidelines

In general, actuators should be mounted in an application using a combination of adhesion and compression. The adhesive ensures the actuator remains in place and the compression mitigates manufacturing tolerances and ensures that the vibration is transferred to the body of the device.

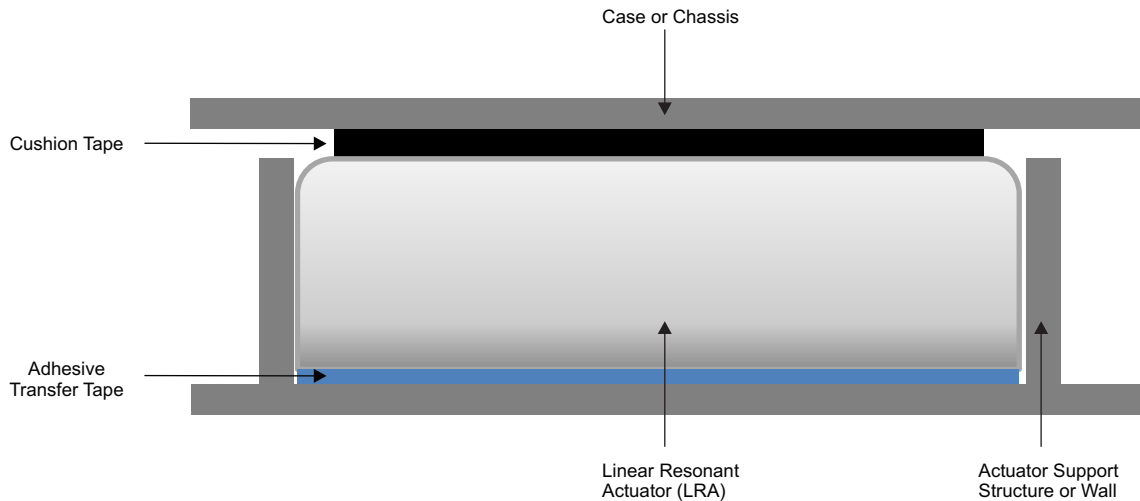


Figure 14. LRA Mounting Stack Up

Actuators are often mounted using an adhesive transfer tape from 3M. This double-sided tape is very strong and intended to withstand a long lifetime of vibration. Many actuator manufacturers provide the option to include the adhesive tape on the actuator for production builds.

Table 4. Adhesive Transfer Tape for Mounting Actuators

| Part Number | Manufacturer | Description |
|-------------|--------------|------------------------|
| 3-5-468MP | 3M | Adhesive transfer tape |

Alternatively, some ERM and LRA actuators can be soldered to the PCB board directly to ensure long lasting vibration performance; however, care must be taken to ensure that vibration is transferred from the PCB to the chassis of the device.

6 Mounting an Actuator for Testing

The acceleration of an actuator often needs to be measured outside of the final system or application to compare actuator strengths, run life-tests, or create haptic effects. The best way to measure acceleration is to mount the actuator on a fixture that has similar mass to the final application. We call this a haptic test fixture. To do this:

1. Create a test fixture that has a similar size and weight as the final application. An aluminum or similar material block works well for most applications.
2. Place the actuator in a similar location as it would appear in the final application and attach it to the mass using strong adhesive tape, epoxy, or glue.
3. Place the test fixture on a material that can isolate the vibration such as a piece of foam or a silicone gel. The mechanical isolation prevents rattling and transferring vibration to the table. Test the material and make sure it roughly mimics the final application environment.
4. Place the accelerometer board on the fixture using the adhesive tape, near the actuator and begin measuring.

To measure the acceleration of an actuator for use inside a smartphone, place the actuator on a 100 g block that has a similar size and shape as the phone. Next, place the block on a piece of packing or ESD foam to represent a hand, which is where a phone is normally held. Finally, measure the acceleration of the block on the foam and compare it to when a person holds it in their hand.

7 Example Waveforms

The following waveforms are acceleration measurements taken with an LRA using the DRV2605L Haptic Driver. The blue waveform is the acceleration and the orange waveform is the output voltage of the DRV2605L.

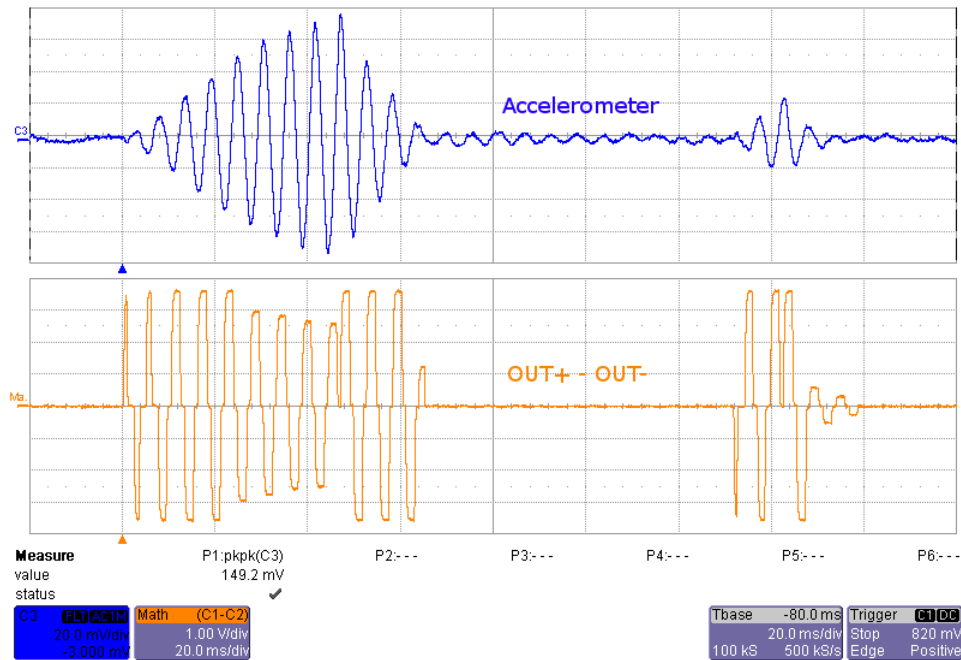


Figure 15. Click and Release Effect

Equation 3 is the measured acceleration calculation for Figure 15.

$$\text{Acceleration} = \frac{149.2 \text{ mVpp}}{2 \times 57 \text{ mVp}} = 1.309 g_{\text{peak}} \quad (3)$$

The peak-to-peak voltage of the accelerometer voltage waveform is divided by 2 to obtain the peak voltage and then divided by 57 mVp to calculate the acceleration.

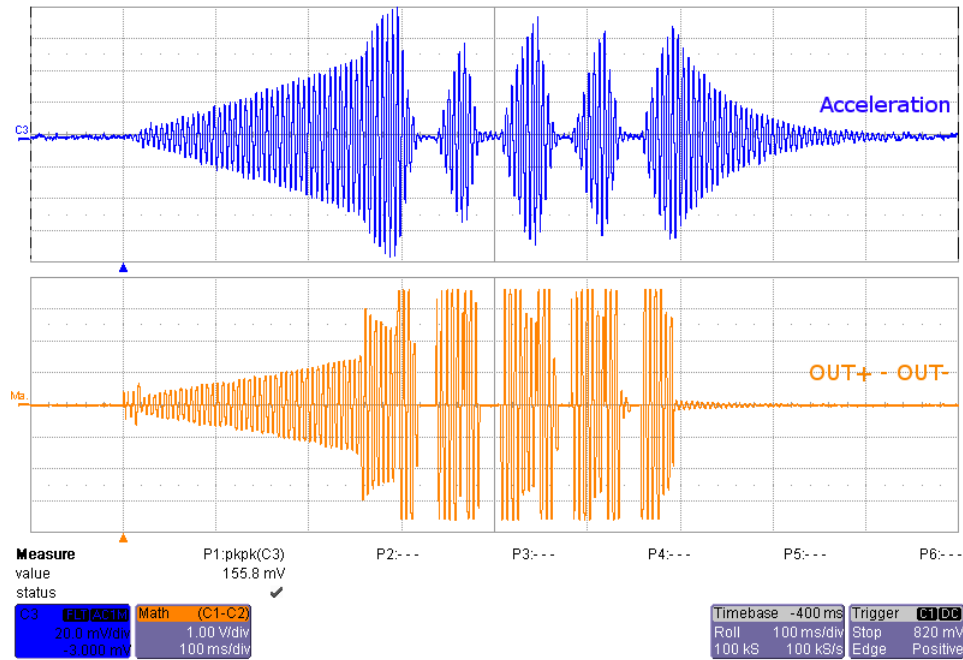


Figure 16. Ramp Up and Pulsing Effect

Equation 4 is the measured acceleration calculation for Figure 16.

$$\text{Acceleration} = \frac{155.8 \text{ mVpp}}{2 \times 57 \text{ mVp}} = 1.367 g_{\text{peak}} \quad (4)$$

Alternatively, use the Math function to find the acceleration at each point in the graph automatically.

8 Screw Hole Dimensions

The accelerometer board can be mounted using the screw holes shown in Figure 17. Figure 17 is the screw hole mechanical footprint.

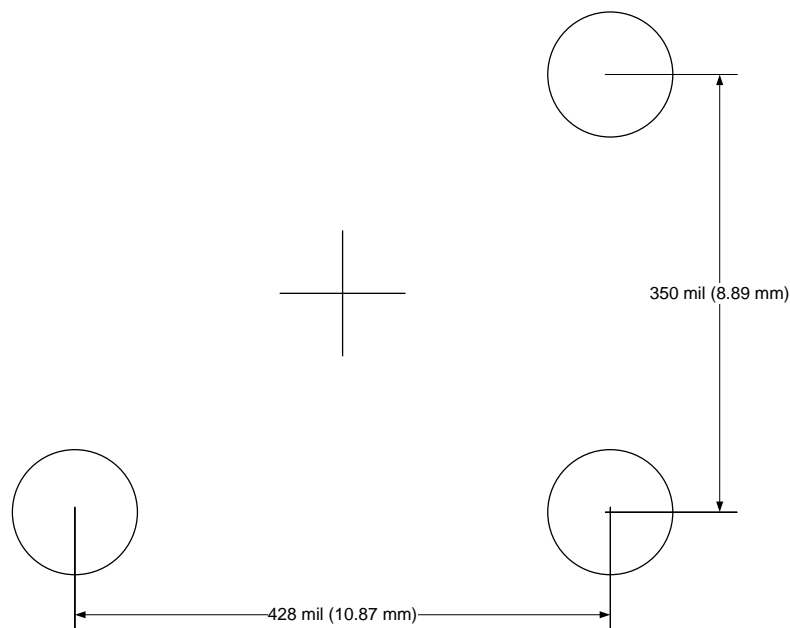


Figure 17. Screw-Hole Footprint

9 Schematic, Layout, and Bill of Materials

This section contains the schematic, PCB layout, and bill of materials.

9.1 Schematic

Figure 18 illustrates the DRV-ACC16-EVM schematic.

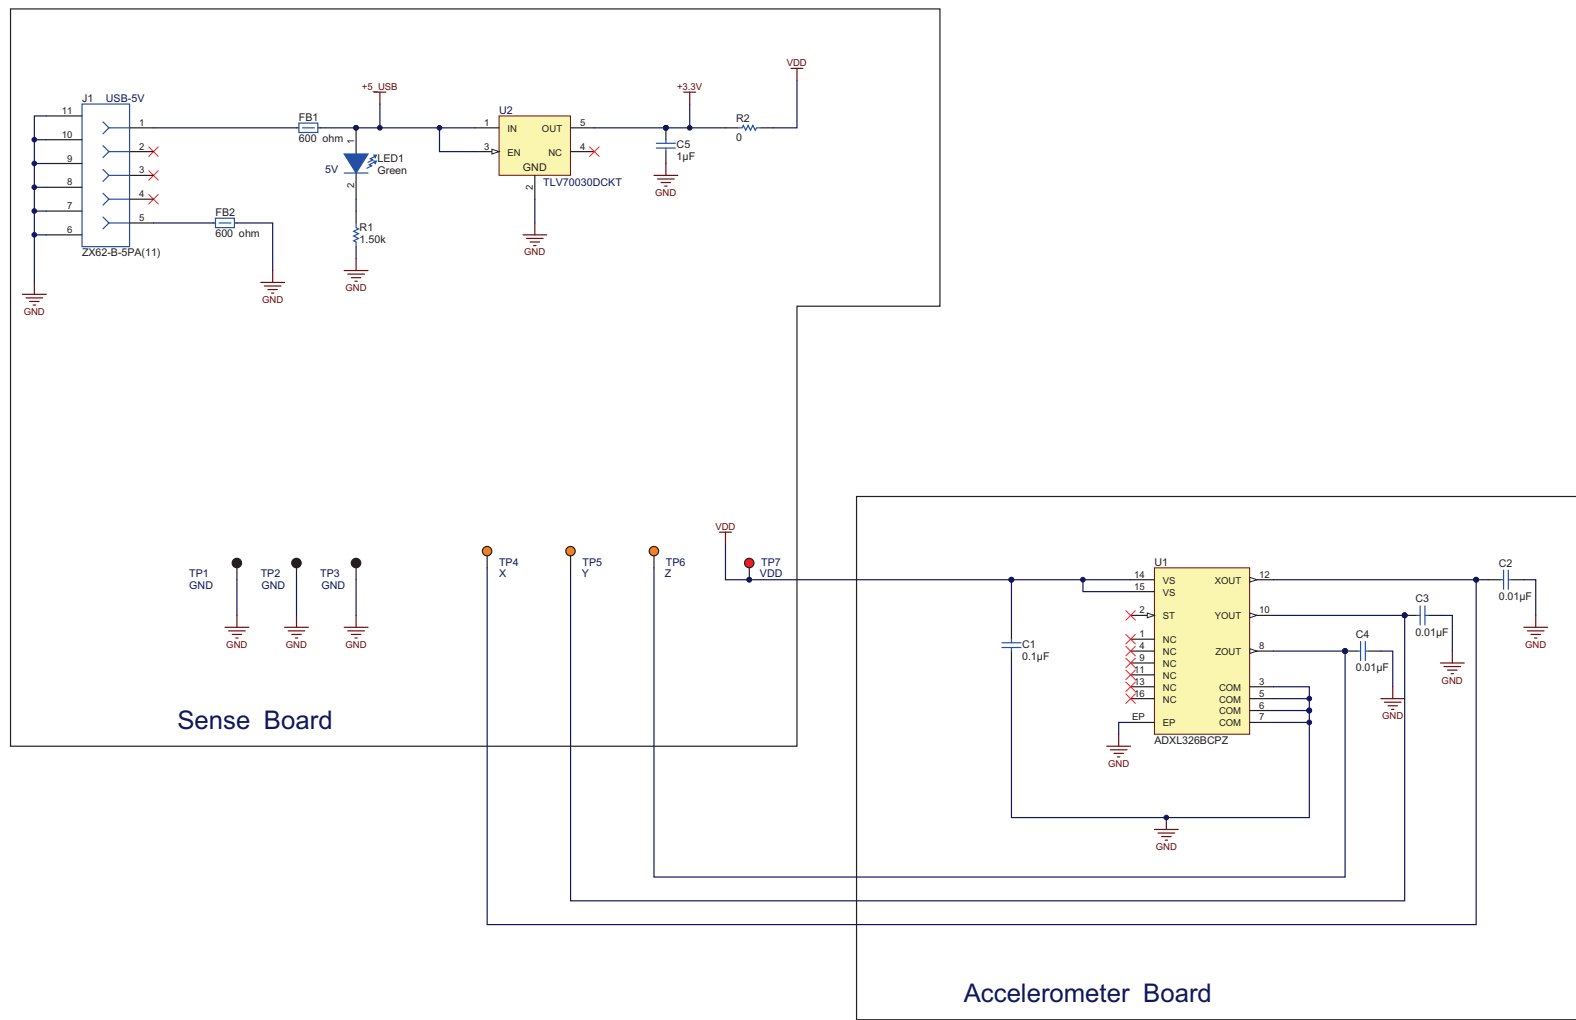


Figure 18. DRV-ACC16-EVM Schematic

9.2 Layout

Figure 19 through Figure 25 display the DRV-ACC16-EVM printed-circuit board (PCB) layout.



Figure 19. DRV-ACC16-EVM Top Overlay



Figure 20. DRV-ACC16-EVM




Figure 21. DRV-ACC16-EVM Top Layer



Figure 22. DRV-ACC16-EVM Bottom Layer



Figure 23. DRV-ACC16-EVM Bottom Solder

| Symbol | Hit Count | Tool Size | Plated | Hole Type |
|--------|-----------|------------------|--------|-----------|
| □ | 47 | 12mil (0.305mm) | PTH | Round |
| ○ | 7 | 63mil (1.6mm) | PTH | Round |
| ▽ | 3 | 108mil (2.743mm) | PTH | Round |
| | 57 Total | | | |

Drill Table



Figure 24. DRV-ACC16-EVM Drill Drawing

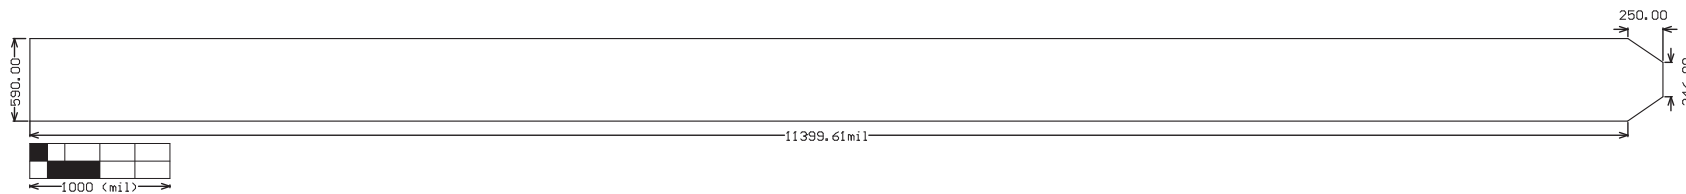


Figure 25. DRV-ACC16-EVM Board Dimensions

Figure 25 illustrates the DRV-ACC16-EVM fabrication drawing.

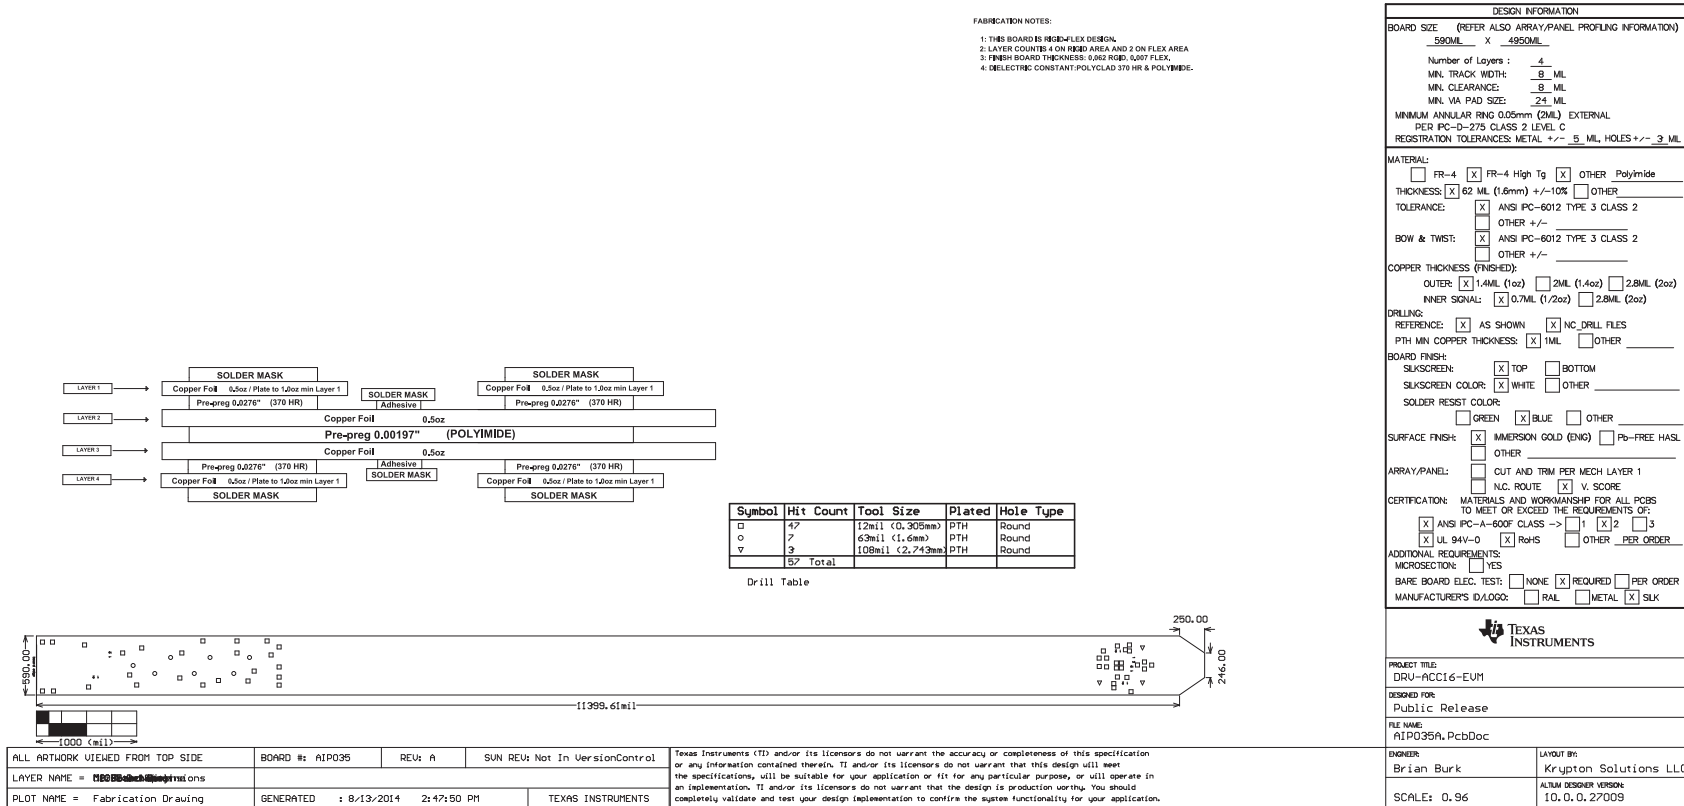


Figure 26. DRV-ACC16-EVM Fabrication Drawing

9.3 Bill of Material (BOM)

Table 5 lists the DRV-ACC16-EVM bill of materials (BOM).

Table 5. Bill of Materials

| Designator | Qty | Value | Description | Package Reference | Part Number | Manufacturer |
|---------------|-----|---------|--|-------------------------------|---------------------|--------------------------|
| C1 | 1 | 0.1uF | CAP, CERM, 0.1 μ F, 6.3 V, +/- 10%, X5R, 0402 | 0402 | C1005X5R0J104K | TDK |
| C2, C3, C4 | 3 | 0.01uF | CAP, CERM, 0.01uF, 10V, +/-10%, X5R, 0402 | 0402 | GRM155R61A103KA01D | Murata |
| C5 | 1 | 1uF | CAP, CERM, 1uF, 25V, +/-10%, X5R, 0402 | 0402 | C1005X5R1E105K050BC | TDK |
| FB1, FB2 | 2 | 600 ohm | Ferrite Bead, 600 ohm @ 100MHz, 2A, 0805 | 0805 | MPZ2012S601A | TDK |
| H1 | 1 | | EVM EVA Black zipper case with TI Logo | Used in PnP output | TI-EVACASE-BLACK | Royal Case |
| H2 | 1 | | CABLE USB-A TO MICRO USB-B 2M | Used in PnP output | AK67421-2-R | Assmann WSW Components |
| H3 | 1 | | TAPE TRANSFER ADHESIVE 3" X 5YD | Used in PnP output | 3M9724-ND | 3M (TC) |
| J1 | 1 | | Connector, Receptacle, Micro-USB Type B, R/A, Bottom Mount SMT | Micro USB-B receptacle | ZX62-B-5PA(11) | Hirose Electric Co. Ltd. |
| LED1 | 1 | Green | LED, Green, SMD | 1.6x0.8x0.8mm | LTST-C190GKT | Lite-On |
| R1 | 1 | 1.50k | RES, 1.50k ohm, 1%, 0.063W, 0402 | 0402 | CRCW04021K50FKED | Vishay-Dale |
| R2 | 1 | 0 | RES, 0, 5%, 0.063 W, 0402 | 0402 | ERJ-2GE0R00X | Panasonic |
| TP1, TP2, TP3 | 3 | Black | Test Point, Multipurpose, Black, TH | Black Multipurpose Testpoint | 5011 | Keystone |
| TP4, TP5, TP6 | 3 | Orange | Test Point, Multipurpose, Orange, TH | Orange Multipurpose Testpoint | 5013 | Keystone |
| TP7 | 1 | Red | Test Point, Multipurpose, Red, TH | Red Multipurpose Testpoint | 5010 | Keystone |
| U1 | 1 | | Small, Low Power, 3-Axis \pm 16 g Accelerometer, QFN16 | QFN16, 4x4 mm | ADXL326BCPZ | |
| U2 | 1 | | Single Output LDO, 200 mA, Fixed 3 V Output, 2 to 5.5 V Input, with Low IQ, 5-pin SC70 (DCK), -40 to 125 degC, Green (RoHS & no Sb/Br) | DCK0005A | TLV70030DCKT | Texas Instruments |

STANDARD TERMS AND CONDITIONS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, or documentation (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms and conditions set forth herein. Acceptance of the EVM is expressly subject to the following terms and conditions.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductor products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms and conditions that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
 - 2.1 These terms and conditions do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for any defects that are caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI. Moreover, TI shall not be liable for any defects that result from User's design, specifications or instructions for such EVMs. Testing and other quality control techniques are used to the extent TI deems necessary or as mandated by government requirements. TI does not test all parameters of each EVM.
 - 2.3 If any EVM fails to conform to the warranty set forth above, TI's sole liability shall be at its option to repair or replace such EVM, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.
3. *Regulatory Notices:*
 - 3.1 *United States*
 - 3.1.1 *Notice applicable to EVMs not FCC-Approved:*

This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.
 - 3.1.2 *For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:*

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。
http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required by Radio Law of Japan to follow the instructions below with respect to EVMs:

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないものご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_02.page

電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_02.page

4 *EVM Use Restrictions and Warnings:*

4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.

4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.

4.3 *Safety-Related Warnings and Restrictions:*

4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.

4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.

4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.

5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. *Disclaimers:*
- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY WRITTEN DESIGN MATERIALS PROVIDED WITH THE EVM (AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS AND CONDITIONS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT MADE, CONCEIVED OR ACQUIRED PRIOR TO OR AFTER DELIVERY OF THE EVM.
7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS AND CONDITIONS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
8. *Limitations on Damages and Liability:*
- 8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS AND CONDITIONS OR THE USE OF THE EVMS PROVIDED HEREUNDER, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN ONE YEAR AFTER THE RELATED CAUSE OF ACTION HAS OCCURRED.
- 8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY WARRANTY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS AND CONDITIONS, OR ANY USE OF ANY TI EVM PROVIDED HEREUNDER, EXCEED THE TOTAL AMOUNT PAID TO TI FOR THE PARTICULAR UNITS SOLD UNDER THESE TERMS AND CONDITIONS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM AGAINST THE PARTICULAR UNITS SOLD TO USER UNDER THESE TERMS AND CONDITIONS SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2015, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

| | |
|------------------------------|--|
| Audio | www.ti.com/audio |
| Amplifiers | amplifier.ti.com |
| Data Converters | dataconverter.ti.com |
| DLP® Products | www.dlp.com |
| DSP | dsp.ti.com |
| Clocks and Timers | www.ti.com/clocks |
| Interface | interface.ti.com |
| Logic | logic.ti.com |
| Power Mgmt | power.ti.com |
| Microcontrollers | microcontroller.ti.com |
| RFID | www.ti-rfid.com |
| OMAP Applications Processors | www.ti.com/omap |
| Wireless Connectivity | www.ti.com/wirelessconnectivity |

Applications

| | |
|-------------------------------|--|
| Automotive and Transportation | www.ti.com/automotive |
| Communications and Telecom | www.ti.com/communications |
| Computers and Peripherals | www.ti.com/computers |
| Consumer Electronics | www.ti.com/consumer-apps |
| Energy and Lighting | www.ti.com/energy |
| Industrial | www.ti.com/industrial |
| Medical | www.ti.com/medical |
| Security | www.ti.com/security |
| Space, Avionics and Defense | www.ti.com/space-avionics-defense |
| Video and Imaging | www.ti.com/video |

TI E2E Community

e2e.ti.com

Looking for pricing, stock, or lifecycle information?

Click below to explore more details on WIN SOURCE:

- ⊖ [View DRV-ACC16-EVM](#) on WIN SOURCE
- ⊖ [Texas Instruments](#) Information

Optimize Your Supply Chain with WIN SOURCE Solutions

- ✓ Global Sourcing Solution
- ✓ Obsolete Management
- ✓ Cost Control Management
- ✓ Shortage Management
- ✓ Alternative Solution
- ✓ Excess Inventory Management